AVANTAGE MP

Motorised and CE marked smoke control shutter that can be perfectly integrated in many smoke control systems







Table of content

Declaration of performance	4
Product presentation AVANTAGE MP	5
Range and dimensions AVANTAGE MP 1V60 - 1V120	6
Evolution - kits	6
Options - at the time of order	6
Storage and handling	7
Installation	7
Operation: manual opening	8
Operation: manual closing	8
Electrical connection	9, 23
Position in the shaft	10
Shock absorber for the door	10
Installation into vertical concrete shaft with mounting frame	11
Installation into vertical concrete shaft without mounting frame	13
Installation into vertical shaft with built-in mounting frame: general instructions for all types of shafts (other than concrete)	14
Installation into vertical shaft (without a mounting frame): general instructions for all types of shafts (other than concrete)	15
Installation into vertical shaft PROMATECT L500 with built-in mounting frame	16
Installation into vertical shaft PROMATECT L500 (without a mounting frame)	16
Installation into vertical shaft GEOFLAM (LIGHT) / GEOTEC with built-in mounting frame	17
Installation into vertical shaft GEOFLAM (LIGHT) / GEOTEC (without a mounting frame)	17
Installation into vertical shaft TECNIVER with built-in mounting frame	18
Installation into vertical shaft TECNIVER (without a mounting frame)	18
Installation into vertical shaft GLASROC F V500 with built-in mounting frame	19
Installation into vertical shaft GLASROC F V500 (without a mounting frame)	19
Installation into vertical shaft EXTHAMAT with built-in mounting frame	20
Installation into vertical shaft EXTHAMAT (without a mounting frame)	20
Installation into vertical shaft DESENFIRE (HD/THD/STR)with built-in mounting frame	21
Installation into vertical shaft DESENFIRE (HD/THD/STR) (without a mounting frame)	21
Installation at minimal distances	22
Product maintenance	22
Operation and mechanisms	23
Electrical connection	23
Weights	24
Selection data	24
Sample order	25
Approvals and certificates	25

Explanation of the abbreviations and pictograms

Wn = nominal width
Hn = nominal height
Sn = free air passage
E = integrity
I = thermal insulation
S = smoke leakage
60/120 = fire resistance time
Pa = pascal
o -> i = meets the criteria from the outside
(o) to the inside (i)
i <-> o = fire side not important
AA = automatic activation
MA = manual activition
multi = multi compartment
ved = vertical duct

hod = horizontal duct vew = vertical wall penetration V = volt W = watt V AC = Volt alternating current V DC = Volt direct current E.TELE = power supply magnet E.ALIM = power supply motor Auto = automatic Tele = remote controlled Pnom = nominal capacity Pmax = maximum capacity DAS MOD = modular product OP = option (delivered with the product) KIT = kit (delivered separately for repair or upgrade) PG = connection flange to the duct GKB (type A) / GKF (type F): "GKB" stands for standard plasterboards (type A according to EN 520) while "GKF" plasterboards offer a higher fire resistance for a similar plate thickness (type F according to EN 520) Cal-Sil = calcium silicate ζ [-] = pressure loss coefficient Q = airflow $\Delta P =$ static pressure drop v = air speed in the ductLwa = A-weighted sound power level ME = motorised H = habitat

3

optimal free air passage and minimal pressure loss	superior air tightness (tested at 1500 Pa)	
intermediate dimensions on request		

DECLARATION OF PERFORMANCE

CE_DoP_Rf-t_V34_EN = D-01/08/2023

4

2. Intended use/es: 3. Manufacturer:		Contraction of the second				
. Manufacturer:		Smoke control damper to be used in smoke control syste	Smoke control damper to be used in smoke control systems, in multi-compartment applications at fire temperatures, or in single-compartment applications.	compartment ap	oplications.	
		Rf-Technologies NV, Lange Ambachtstraat 40, B-9860 Oosterzele	osterzele			
4. System/s of AVCP:		System 1				
Harmonised standard / Eur Technical Assessment, Tech	 Harmonised standard / European Assessment Document, notified body / European Technical Assessment, Technical Assessment Body, notified body; certificate of 	EN 12101-8:2011, Efectis with identification number 1812; EFECTIS_1812_CPR_2017	12; EFECTIS_1812_CPR_2017			
6. Declared performance according to EN 12101-8:2011	rding to EN 12101-8:2011	(fire resistance according to EN 1366-10, classification according to EN 13501-4)	ccording to EN 13501-4)			
Essential characteristics					Performance	
Range	Product	Shaft type	Shaft	Installation	Classification	
350x385 mm ≤ Avantage 1V Avantage 60 MP	Avantage 60 MP	Shaft	Promatect L500 ≥ 30 mm	-	El 60 (v _{ed} i ↔ o) S 1500 C10000 AA multi	
MP ≤ 700x1075 mm			Geoflam ≥ 30 mm			
			Geotec ≥ 30 mm			
			Tecniver ≥ 35 mm			
			Glasroc F V500 ≥ 35 mm			
			Exthamat ≥ 25 mm			
			Desenfire HD ≥ 25 mm	_		
			Concrete ≥ 90 mm			
			Masonry, concrete blocks, concrete ≥ 100 mm			
	Avantage 120 MP	Shaft	Promatect L500 ≥ 40 mm		El 90 (ved i ↔ o) S 1500 C10000 AA multi	
			Geoflam ≥ 35 mm			
			Tecniver ≥ 45 mm			
			Exthamat ≥ 30 mm			
			Desenfire THD ≥ 25 mm			
			Concrete ≥ 90 mm			
			Masonry, concrete blocks, concrete ≥ 100 mm			mor EN 1
	Avantage 120 MP	Shaft	Promatect L500 ≥ 50 mm	-	El 120 (v_{ed} i \leftrightarrow o) S 1500 C10000 AA multi	210
			Geoflam ≥ 45 mm			
			Geoflam Light ≥ 35 mm			
			Geotec ≥ 45 mm			
			Tecniver ≥ 50 mm			
			Glasroc F V500 ≥ 50 mm			
			Exthamat ≥ 35 mm	_		
			Desenfire HD ≥ 35 mm			
			Desenfire ≥ 45 mm			
			Desenfire STR > 25 mm			
			Masonry, concrete blocks, concrete ≥ 100 mm			
1 Type of installation	Type of installation: shaft-mounted 0/180°. Minimal in-between distances authorised.	authorised.			ty max 2 +	
Nominal activation conditions/sensitivity:		Pass - automatic activation				
Response delay (response time): closure time	e): closure time	Pass - automatic activation				
Operational reliability: cycling		10000 cycles (no load)				
Durability of operational reliability:	Pass pility: Pass					
Approved accessories		EASY-KAP ME/MP mounting frame: motor VA MP MEC				
High operational temperature (HOT 400/30):		NPD (no performance determined)				

HAN LA Oosterzele, 01/08/2023

Declaration of performance

Product presentation AVANTAGE MP

The AVANTAGE MP is a motorised and CE marked smoke control shutter that can be perfectly integrated in many smoke control systems. It is certified in accordance with EN12101-8, suitable for vertical mounting in ducts or concrete shafts. Offering 60 or 120 minutes fire resistance at minimum pressure loss, it is classified as suitable for multi-compartment applications. In addition, AVANTAGE MP has a C10000 cycling classification, which means it can be used in combined smoke control and environmental, energy saving systems. It opens to supply and release air or to evacuate smoke in emergency situations whilst maintaining its fire resistant integrity in standby position.

The AVANTAGE MP is designed for use in:

- Pressure Differential Systems (PDS): e.g. pressurising staircases.

- Smoke and Heat Exhaust Ventilation Systems (SHEVS): ventilating protected lobbies and corridors through shafts, either naturally or mechanically, or a combination of both.

- Energy saving systems combined with PDS or SHEVS: e.g. night cooling systems.

Smoke control shutters and dampers are suitable for use in ventilating protected lobbies, venting to shafts either naturally or mechanically. They open to evacuate smoke in emergency situations whilst maintaining fire resistant integrity in standby position.

☑ optimal smoke control shutter thanks to higher free air passage and minimal pressure loss

- easy to install thanks to optional mounting frame EASY-KAP ME/MP and its light weight
- ☑ simple operating tests through remote opening and resetting by an actuator
- ☑ installation at minimal distances


tested according to EN 1366-10

- compliant with EN 12101-8
- suitable for use as air release and air supply vent in PDS-systems according to EN 12101-6
- suitable for air supply and smoke control vent in SHEVS-systems according to EN 12101-8
- light weight: ≤ 35 kg
- approved for installation in calcium-silicate, 'Staff', Tecniver, Glasroc, Extha and concrete shafts.
- maintenance-free
- superior air tightness (tested at 1500 Pa)
- 1. 1 shutter
- 2. aluminium frame
- 3. lock + key
- 4. connection compartment
- 5. actuating arm
- 6. resetting motor
- 7. product identification






Range and dimensions AVANTAGE MP

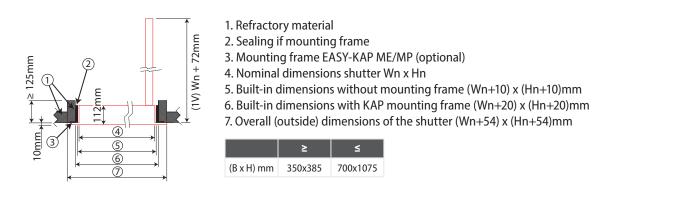

Evolution - kits

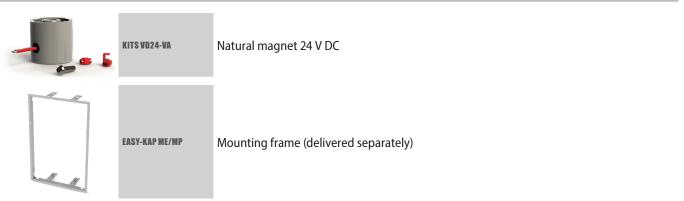

Options - at the time of order

BLACK	Black covering plate
n	Trailing lead 3 m for external connection

Storage and handling

As this product is a safety element, it should be stored and handled with care.

Avoid:

- any kind of impact or damage
- contact with water
- deformation of the casing

It is recommended:

- to unload in a dry area
- not to flip or roll the product to move it
- not to use the damper as a scaffold, working table, etc.
- not to store smaller dampers inside larger ones

Installation

General points


- The installation must comply with the installation manual and the classification report.
- The installation of the smoke control duct must comply with the classification report delivered by the manufacturer.
- Axis orientation: see the declaration of performance.
- Avoid the obstruction of adjoining smoke control ducts.
- Verify if the blade can move freely.
- Rf-t smoke dampers may be applied to smoke control ducts that have been tested according to EN 1366-8 and EN 1366-9 as
 appropriate, constructed from similar materials with a fire resistance, thickness and density equal or superior to these of the tested
 materials.
 - A Caution: when fitting, the product should be handled with care and remain protected from any sealing products.
 - A Caution: before putting the installation into operation, clean off all the dust and dirt.
 - A Caution: bear in mind the blade's clearance inside the smoke control duct.

B Installation

1


1

Operation: manual opening

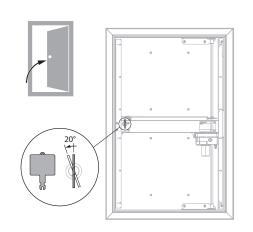


1. Unlocking 1V Turn the key 20° anti-clockwise and push the shutter into its open position.

Operation: manual closing

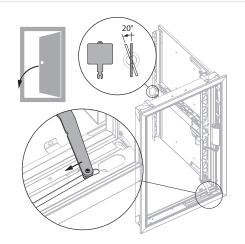

1. Turn the key 20° anti-clockwise. Push the actuating arm in the direction of the arrow and pull the shutter into its closed position.

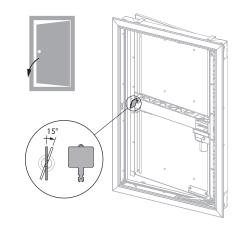


2

2. Turn the key 15° clockwise. The key blocks in the lock and the door can be pulled into its lock.

Electrical connection


1

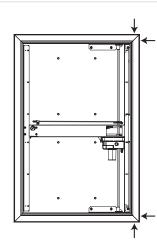


2

4


1. The electrical connection is possible via the 2 corners at the side of the hinges.

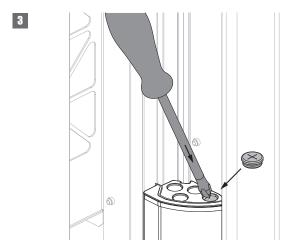

3. Pierce an opening in the connection box. Affix the grommet delivered with the product.

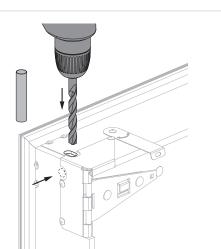

2. Drill a hole in the refractory material at the chosen corner(s). The galvanised part at the inside of the shutter is already indented.

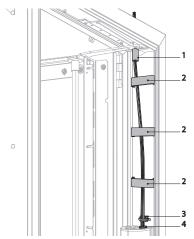

4. Lead the cables through the opening. Use the protective sleeve (1), the fixation clips (2) and the plastic cable clamp (3) to attach the cables to the frame. Lead the cables to the connection box through the grommet (4) and connect according to the electrical connection diagram.

▲ Caution: after passing and fixing the cables, you need to seal the drilled hole in the refractory plates around the electrical cables with fire resistant adhesive sealant (BCM f.e.).


Installation

1


3

1

Position in the shaft

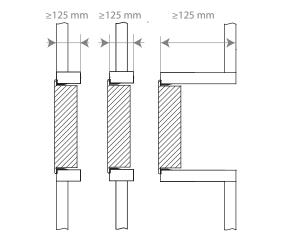


1. The shutter is affixed to the smoke control shaft through a sleeve. That sleeve can be installed either in the shaft, in the axis of the shaft or outside the shaft (or shaft extension).

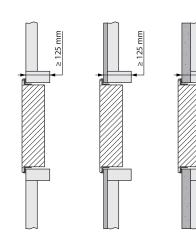


3. In order to prevent cracks around the opening in the long term, a finishing layer (plasterboard, (cellular) concrete, rigid wall) can be added between the mounting frame and the opening.

Shock absorber for the door

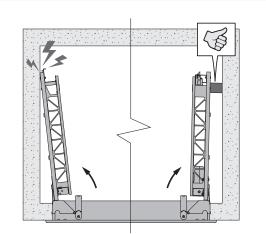

1. Shock absorber (foam) comes standard with the shutter. It can be affixed to the inner face of the door to prevent it from hitting the shaft wall when opening.

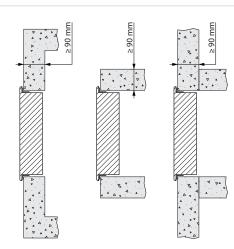



2

4

2

≥ 125 mm

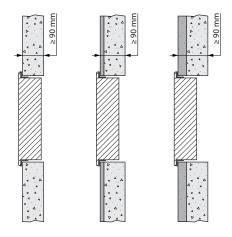

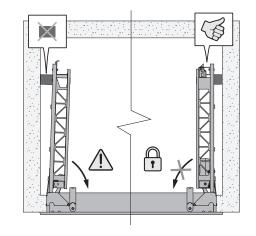

2. Be sure to cut the block to the correct dimensions so that the blocking mechanism can engage when the door opens.


Installation into vertical concrete shaft with mounting frame

The product was tested and approved in:

Product	Range	Wall type		Classification
Avantage 60 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Concrete ≥ 90 mm	El 60 (v_{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 60 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Masonry, concrete blocks, concrete ≥ 100 mm	El 60 (v _{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Concrete ≥ 90 mm	El 90 (v_{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Masonry, concrete blocks, concrete ≥ 100 mm	El 90 (v _{ed} i ↔ o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Masonry, concrete blocks, concrete ≥ 100 mm	El 120 (v _{ed} i ↔ o) S 1500 C10000 AA multi

2

1

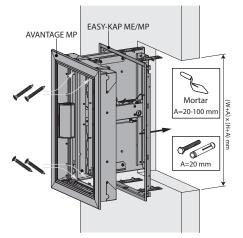


1. In case the mounting frame is screwed:

Make an opening with dimensions (W+20 min / +30 max) x (H+20 min / +30 max) mm.

In case the mounting frame is fixed with mortar:

Make an opening with dimensions (W+20) x (H+20) mm till (W+100) x (H+100) mm.

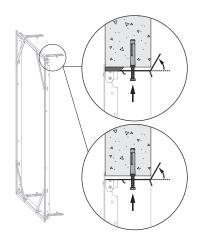

2. The mounting frame should always be fastened to the concrete shaft with screws and dowels (Ø6 x minimum 60 mm, steel or stainless steel).

For an opening with dimensions up to (W+20 min / +30 max) x (H+20 min / +30 max) mm:

Two fixing lugs are provided at the bottom and at the top of the mounting frame: fold these against the shaft and fasten the mounting frame with 4 screws $Ø6 \times 60$ mm, taking care not to misshape it. These screws can be inserted through any of the punched holes in the lugs, depending on the thickness of the shaft wall.

The finished opening must have the same size as the mounting frame (W+10) x (H+10) mm.


For an opening with dimensions up to $(W+100) \times (H+100)$ mm: Apply mortar around the opening to reduce the opening to the outer dimensions of the frame, then proceed as mentioned above to fasten the frame into the opening. Make sure that the gap between the frame and the opening is sealed completely with mortar.

The mortar must harden completely before the damper is fastened to the mounting frame.


Installation



5

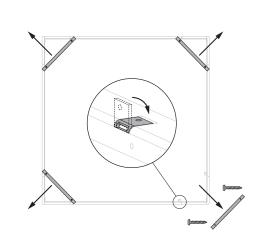

3. Put aside the screws that are affixed to one of the cross slats, then unscrew the 4 cross slats of the mounting frame and fold the 8 fastening plates in the frame.

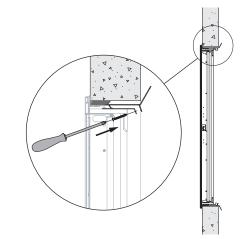


5. Open the shutter and position it in the mounting frame. Fasten the shutter onto the mounting frame with the 4 screws supplied, as shown in the drawing. Tightening the screws pulls the shutter towards the wall until its final position. You can also slightly correct the angle of the shutter with respect to the mounting frame.

Connect the mechanism according to the wiring diagram.

▲ Caution: Connecting the frame to an uneven surface can lead to distortion of this frame. Check whether the slack between the frame and the surface of the door is still acceptable.

Check the mobility of the shutter.

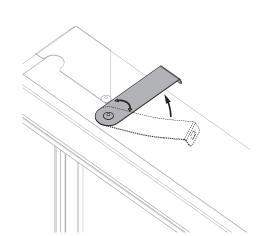

4

4. Rotate the four fastening plates on the damper 90° (to the upright position).


Installation into vertical concrete shaft without mounting frame

The product was tested and approved in:

Product	Range	Wall type		Classification
Avantage 60 MP	$350x385 \text{ mm} \le \text{Avantage 1V MP} \le 700x1075 \text{ mm}$	Shaft	Concrete ≥ 90 mm	El 60 (v_{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 60 MP	350x385 mm \leq Avantage 1V MP \leq 700x1075 mm	Shaft	Masonry, concrete blocks, concrete ≥ 100 mm	El 60 (v_{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	$350x385 \text{ mm} \le \text{Avantage 1V MP} \le 700x1075 \text{ mm}$	Shaft	Concrete ≥ 90 mm	El 90 (v_{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Masonry, concrete blocks, concrete \geq 100 mm	El 90 (v_{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Masonry, concrete blocks, concrete ≥ 100 mm	El 120 (v _{ed} i \leftrightarrow o) S 1500 C10000 AA multi

2

1

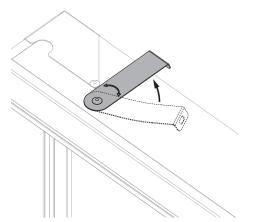

AVANTAGE MP

1. Rotate the four fastening plates on the damper 90° (to the upright position).

The fastening plates are not used for an installation without a mounting frame.


2. Make an opening with dimensions (W+10) x (H+10) mm. Fix the shutter in the opening using 4 screws and dowels \emptyset 6 x 40 mm.

Connect the mechanism according to the wiring diagram. Check the mobility of the shutter.


Installation into vertical shaft with built-in mounting frame: general instructions for all types of shafts (other than concrete)

2

4

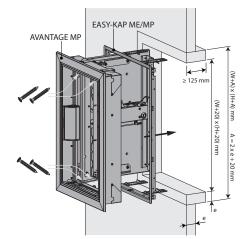


1. Make an opening with dimensions (W+A) x (H+A) mm. A = 2 x thickness sleeve (e) + 20 mm min. / + 30 mm max. Fit a sleeve of the same type of material and thickness as the duct (thickness e) of minimum 125 mm deep in the opening. Fasten and seal the mounting frame. See details per type of shaft hereafter.

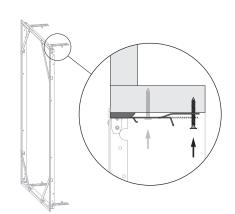


2. Two fixing lugs are provided at the bottom and at the top of the mounting frame: fold these against the sleeve. When fixed with screws, fasten the mounting frame to the sleeve with chipboard screws (\emptyset 6 x e) mm. These screws can be fixed in one of the openings provided for this purpose, depending on the depth of the sleeve.


Take care not to misshape the frame during its installation. The finished opening must have the same size as the mounting frame $(W+10) \times (H+10) mm$.

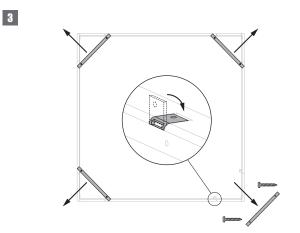

3. Put aside the screws that are affixed to one of the cross slats, then unscrew the 4 cross slats of the mounting frame and fold the 8 fastening plates in the frame.

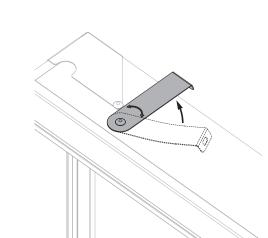

4. Rotate the four fastening plates on the damper 90° (to the upright position).

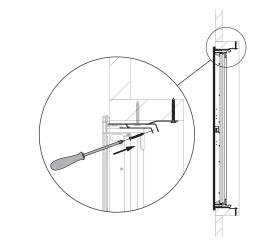

1

5. Open the shutter and position it in the mounting frame. Fasten the shutter onto the mounting frame with the 4 screws supplied, as shown in the drawing. Tightening the screws pulls the shutter towards the wall until its final position. You can also slightly correct the angle of the shutter with respect to the mounting frame.


Connect the mechanism according to the wiring diagram.

▲ Caution: Connecting the frame to an uneven surface can lead to distortion of this frame. Check whether the slack between the frame and the surface of the door is still acceptable.

Check the mobility of the shutter.


Installation into vertical shaft (without a mounting frame): general instructions for all types of shafts (other than concrete)

2

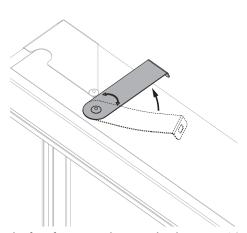

1. Rotate the four fastening plates on the damper 90° (to the upright position).

The fastening plates are not used for an installation without a mounting frame.

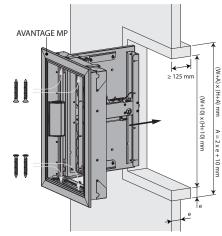

2. Make an opening with dimensions (W+A) x (H+A) mm. A = 2 x thickness sleeve (e) + 10 mm.

Fit a sleeve of the same type of material and thickness as the duct (thickness e) of minimum 125 mm deep in the opening. Place the shutter in the opening.

Ensure the cables are not trapped at this stage.

Fix the shutter in the opening using 4 screws Ø6 x 40 mm.

A Caution: make sure that the screws don't exceed the sleeve's thickness!


Connect the mechanism according to the wiring diagram. Check the mobility of the shutter.

1

Installation into vertical shaft PROMATECT L500 with built-in mounting frame

The product was tested and approved in:

Product	Range	Wall type		Classification
Avantage 60 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Promatect L500 ≥ 30 mm	El 60 (v_{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Promatect L500 ≥ 40 mm	El 90 (v _{ed} i ↔ o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Promatect L500 ≥ 50 mm	El 120 ($v_{ed} i \leftrightarrow o$) S 1500 C10000 AA multi

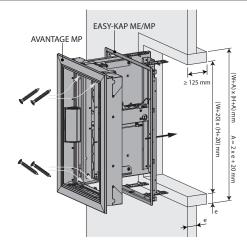

1. Assemble the sleeve with staples and affix the assembled sleeve to the shaft wall with staples.


Coat the edges of the opening with adhesive plaster type Promacol S.

Screw the mounting frame to the sleeve with chipboard screw (Ø 6 x e)mm. Two fixing lugs are provided at the bottom and at the top of the mounting frame: fold these against the sleeve. Seal the mounting frame with Promacol S taking care not to misshape it. The finished opening must have the same size as the mounting frame (W+10) x (H+10) mm.

Installation into vertical shaft PROMATECT L500 (without a mounting frame)

The product was tested and approved in:

Product	Range	Wall type		Classification
Avantage 60 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Promatect L500 ≥ 30 mm	El 60 (v_{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	$350x385 \text{ mm} \le \text{Avantage 1V MP} \le 700x1075 \text{ mm}$	Shaft	Promatect L500 \ge 40 mm	El 90 (v_{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Promatect L500 ≥ 50 mm	El 120 (v _{ed} i \leftrightarrow o) S 1500 C10000 AA multi

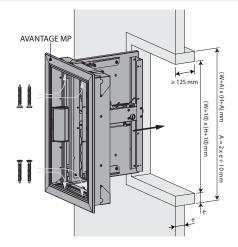

1. Assemble the sleeve with staples and affix the assembled sleeve to the shaft wall with staples.


Installation into vertical shaft GEOFLAM (LIGHT) / GEOTEC with built-in mounting frame

The product was tested and approved in:

1

1

Product	Range	Wall type		Classification
Avantage 60 MP	$350x385 \text{ mm} \le \text{Avantage 1V MP} \le 700x1075 \text{ mm}$	Shaft	Geoflam ≥ 30 mm	El 60 (v _{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 60 MP	$350x385 \text{ mm} \le \text{Avantage 1V MP} \le 700x1075 \text{ mm}$	Shaft	Geotec ≥ 30 mm	El 60 (v _{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Geoflam ≥ 35 mm	El 90 (v _{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	$350x385 \text{ mm} \le \text{Avantage 1V MP} \le 700x1075 \text{ mm}$	Shaft	Geoflam ≥ 45 mm	El 120 (v _{ed} i ↔ o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Geoflam Light ≥ 35 mm	El 120 ($v_{ed}^{}i \leftrightarrow o$) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm \leq Avantage 1V MP \leq 700x1075 mm	Shaft	Geotec ≥ 45 mm	El 120 ($v_{ed} i \leftrightarrow o$) S 1500 C10000 AA multi

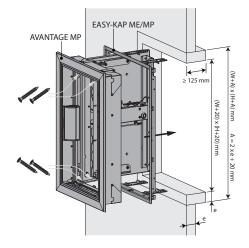


1. Coat the edges of the opening with adhesive plaster type PLACOL (in case of Geoflam) or GEOCOL (S) (in case of Geotec). In case of Geotec you can also assemble the sleeve with glue and screws Ø 5 x (2 x e) mm and affix the assembled sleeve to the shaft wall with glue and screws Ø 5 x (2 x e) mm every 100 mm. Seal the joints between uprights and cross pieces and between the lining and the wall with vegetable fibre caulking and plaster or with GEOCOL (S) (in case of Geotec).

Two fixing lugs are provided at the bottom and at the top of the mounting frame: fold these against the sleeve. Caulk the mounting frame to the duct with vegetable fibre or (in case of Geotec) you can also coat the opening with Geocol (S) and fasten the mounting frame with screws of Ø 5 x e mm. Take care not to misshape the frame. The finished opening must have the same size as the mounting frame (W+10) x (H+10) mm.

Installation into vertical shaft GEOFLAM (LIGHT) / GEOTEC (without a mounting frame)

The product was tested and approved in:

Product	Range	Wall type		Classification
Avantage 60 MP	$350x385 \text{ mm} \le \text{Avantage 1V MP} \le 700x1075 \text{ mm}$	Shaft	Geoflam ≥ 30 mm	El 60 (v_{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 60 MP	$350x385 \text{ mm} \le \text{Avantage 1V MP} \le 700x1075 \text{ mm}$	Shaft	Geotec ≥ 30 mm	El 60 (v_{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	$350x385 \text{ mm} \le \text{Avantage 1V MP} \le 700x1075 \text{ mm}$	Shaft	Geoflam ≥ 35 mm	El 90 (v _{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Geoflam ≥ 45 mm	El 120 ($v_{ed} i \leftrightarrow o$) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Geoflam Light ≥ 35 mm	El 120 (v _{ed} i ↔ o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Geotec ≥ 45 mm	El 120 (v _{ed} i ↔ o) S 1500 C10000 AA multi

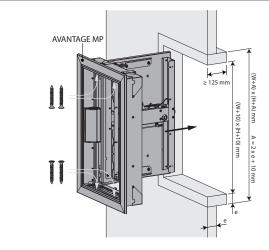

1. Coat the edges of the opening with adhesive plaster type PLACOL (in case of Geoflam) or GEOCOL (S) (in case of Geotec). Seal the joints between uprights and cross pieces and between the lining and the wall with vegetable fibre caulking and plaster or with GEOCOL (S) (in case of Geotec).


In case of Geotec you can also assemble the sleeve with glue and screws Ø 5 x (2 x e) mm and affix the assembled sleeve to the shaft wall with glue and screws Ø 5 x (2 x e) mm every 100 mm.

1

Installation into vertical shaft TECNIVER with built-in mounting frame

The product was tested and approved in:

Product	Range	Wall type		Classification
Avantage 60 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Tecniver ≥ 35 mm	El 60 (v _{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Tecniver ≥ 45 mm	El 90 (v _{ed} i ↔ o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Tecniver ≥ 50 mm	El 120 (v _{ed} i ↔ o) S 1500 C10000 AA multi

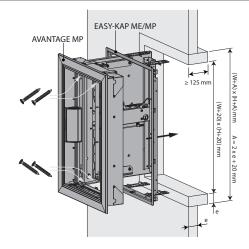


1. Put glue type CF GLUE on the uprights and cross pieces and between the lining and the wall. Screw the sleeve using chipboard screws Ø5 x 70 mm at 150 mm intervals. Two fixing lugs are provided at the bottom and at the top of the mounting frame: fold these against the sleeve. First coat the opening with glue CF GLUE. Glue the mounting frame to the lining taking care not to misshape it. The finished opening must have the same size as the mounting frame (W+10) x (H+10) mm.

Installation into vertical shaft TECNIVER (without a mounting frame)

The product was tested and approved in:

Product	Range	Wall type		Classification
Avantage 60 MP	$350x385 \text{ mm} \le \text{Avantage 1V MP} \le 700x1075 \text{ mm}$	Shaft	Tecniver ≥ 35 mm	El 60 (v _{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	$350x385 \text{ mm} \le \text{Avantage 1V MP} \le 700x1075 \text{ mm}$	Shaft	Tecniver ≥ 45 mm	El 90 (v _{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	$350x385 \text{ mm} \le \text{Avantage 1V MP} \le 700x1075 \text{ mm}$	Shaft	Tecniver ≥ 50 mm	El 120 (v _{ed} i \leftrightarrow o) S 1500 C10000 AA multi

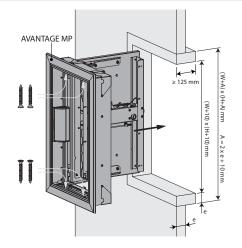

1. Put glue type CF GLUE on the uprights and cross pieces and between the lining and the wall. Screw the sleeve using chipboard screws Ø5 x 70 mm at 150 mm intervals.


Installation into vertical shaft GLASROC F V500 with built-in mounting frame

The product was tested and approved in:

1

1

Product	Range	Wall type		Classification
Avantage 60 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Glasroc F V500 ≥ 35 mm	El 60 (v_{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Glasroc F V500 ≥ 50 mm	El 120 ($v_{ed} i \leftrightarrow o$) S 1500 C10000 AA multi

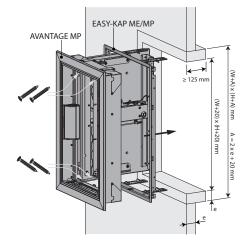


1. Put glue type GLASROC F V500 on the uprights and cross pieces and between the lining and the wall. Screw the sleeve using chipboard screws Ø5 x 70 mm at 150 mm intervals. Two fixing lugs are provided at the bottom and at the top of the mounting frame: fold these against the sleeve. First coat the opening with glue GLASROC F V500. Glue the mounting frame to the lining taking care not to misshape it. The finished opening must have the same size as the mounting frame (W+10) x (H+10) mm.

Installation into vertical shaft GLASROC F V500 (without a mounting frame)

The product was tested and approved in:

Product	Range	Wall type		Classification
Avantage 60 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Glasroc F V500 ≥ 35 mm	El 60 (v_{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Glasroc F V500 ≥ 50 mm	El 120 (v _{ed} i ↔ o) S 1500 C10000 AA multi

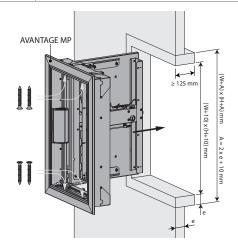


1. Put glue type GLASROC F V500 on the uprights and cross pieces and between the lining and the wall. Screw the sleeve using chipboard screws Ø5 x 70 mm at 150 mm intervals.

1

Installation into vertical shaft EXTHAMAT with built-in mounting frame

The product was tested and approved in:

Product	Range	Wall type		Classification
Avantage 60 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Exthamat ≥ 25 mm	El 60 (v_{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Exthamat ≥ 30 mm	El 90 (v _{ed} i ↔ o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Exthamat ≥ 35 mm	El 120 (v _{ed} i ↔ o) S 1500 C10000 AA multi

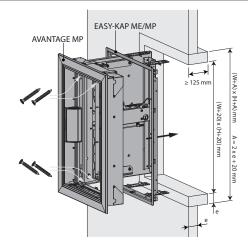


1. Coat the edges of the opening with adhesive plaster. Seal the joints between uprights and cross pieces and between the lining and the wall with vegetable fibre caulking and plaster.

Two fixing lugs are provided at the bottom and at the top of the mounting frame: fold these against the sleeve. Caulk the mounting frame to the duct with vegetable fiber caulking and plaster and taking care not to misshape it. The finished opening must have the same size as the mounting frame (W+10) x (H+10) mm.

Installation into vertical shaft EXTHAMAT (without a mounting frame)

The product was tested and approved in:

Product	Range	Wall type		Classification
Avantage 60 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Exthamat ≥ 25 mm	El 60 (v _{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	$350x385 \text{ mm} \le \text{Avantage 1V MP} \le 700x1075 \text{ mm}$	Shaft	Exthamat ≥ 30 mm	El 90 (v_{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	$350x385 \text{ mm} \le \text{Avantage 1V MP} \le 700x1075 \text{ mm}$	Shaft	Exthamat ≥ 35 mm	El 120 (v _{ed} i \leftrightarrow o) S 1500 C10000 AA multi

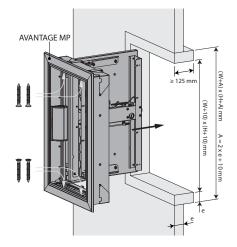

1. Coat the edges of the opening with adhesive plaster. Seal the joints between uprights and cross pieces and between the lining and the wall with vegetable fibre caulking and plaster.


Installation into vertical shaft DESENFIRE (HD/THD/STR) with built-in mounting frame

The product was tested and approved in:

1

1

Product	Range	Wall type		Classification
Avantage 60 MP	350x385 mm \leq Avantage 1V MP \leq 700x1075 mm	Shaft	Desenfire HD \ge 25 mm	El 60 (v_{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm \leq Avantage 1V MP \leq 700x1075 mm	Shaft	Desenfire THD ≥ 25 mm	El 90 (v _{ed} i ↔ o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Desenfire HD ≥ 35 mm	El 120 (v _{ed} i ↔ o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Desenfire ≥ 45 mm	El 120 (v _{ed} i ↔ o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm \leq Avantage 1V MP \leq 700x1075 mm	Shaft	Desenfire STR ≥ 25 mm	El 120 (v_{ed} i \leftrightarrow o) S 1500 C10000 AA multi

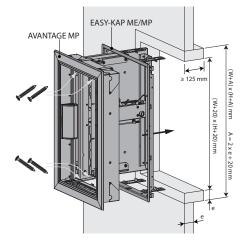

1. Coat the edges of the opening with adhesive plaster, type FACILIS.


Seal the joints between uprights and cross pieces and between the lining and the wall with vegetable fibre caulking and plaster.

Two fixing lugs are provided at the bottom and at the top of the mounting frame: fold these against the sleeve. Caulk the mounting frame to the duct with vegetable fiber caulking and plaster and taking care not to misshape it. The finished opening must have the same size as the mounting frame (W+10) x (H+10) mm.

Installation into vertical shaft DESENFIRE (HD/THD/STR) (without a mounting frame)

The product was tested and approved in:

Product	Range	Wall type		Classification
Avantage 60 MP	350x385 mm \leq Avantage 1V MP \leq 700x1075 mm	Shaft	Desenfire HD ≥ 25 mm	El 60 (v_{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	$350x385 \text{ mm} \le \text{Avantage 1V MP} \le 700x1075 \text{ mm}$	Shaft	Desenfire THD ≥ 25 mm	El 90 (v _{ed} i \leftrightarrow o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm \leq Avantage 1V MP \leq 700x1075 mm	Shaft	Desenfire HD ≥ 35 mm	El 120 (v _{ed} i ↔ o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Desenfire ≥ 45 mm	El 120 (v _{ed} i ↔ o) S 1500 C10000 AA multi
Avantage 120 MP	350x385 mm ≤ Avantage 1V MP ≤ 700x1075 mm	Shaft	Desenfire STR ≥ 25 mm	El 120 (v _{ed} i ↔ o) S 1500 C10000 AA multi

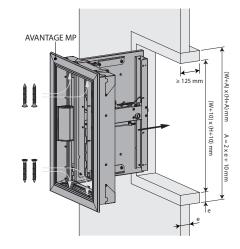


1. Coat the edges of the opening with adhesive plaster, type FACILIS.

Seal the joints between uprights and cross pieces and between the lining and the wall with vegetable fibre caulking and plaster.


2 Installation

1

Installation at minimal distances

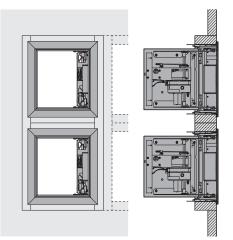

1. The shutters can be installed at minimal distance on top of or next to each other, if they are mounted in separate sleeves made from the shaft material with the required fire resistance. It is advised not to exceed a 4×2 configuration (W x H).

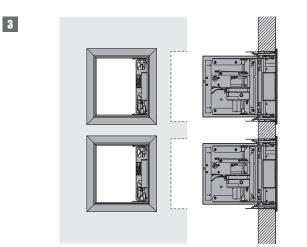

3. When mounting in a concrete shaft, you need to provide a continuous reinforcement in the vertical columns of at least 4 x Ø 8 mm.

Product maintenance


Smoke control dampers must form part of a professionally designed Smoke and Heat Exhaust Ventilation System (SHEVS) that will be specially suited to an individual buildings size, usage and structure. SHEVS are Fire Safety Installations and it is essential they are subject to the routine inspection and maintenance requirements of the country of installation of the SHEV system. For example, BS7346 part 8, NF S 61-933 and EN 13306. Kamouflage MP dampers are virtually maintenance free, however, they will require occasional operation and maintenance as part of a system specific routine operational test and maintenance procedure. It is recommended that as part of the system testing and maintenance procedure that different individual dampers are operated at each system test such that each damper within a system is inspected, checked and tested at least once in any 6-month period. The following instructions are a general guide and our recommendations to the procedures required: a) Operate each ventilator at least once; checking that the unit opens and closes fully. b) Visually observe the control mechanisms ensuring the devices are in place and are not obviously damaged or obstructed. c) Inspect each ventilator in its open position to check that the intumescent fire seals and smoke seals between the vent frame and doors are not damaged and are securely attached. Wipe any dirt build up from the seals. Inspect the door leading and trailing edge seals and lightly lubricate with a machine oil and a silicone grease to the release latch.

2


4

Maintenance

- No specific maintenance required.
- Schedule at least 2 visual checks each year.
- Remove dust and all other particles before use.
- Follow local maintenance regulations (i.e. BS9999 Annex V; NF S 61-933) and EN13306.

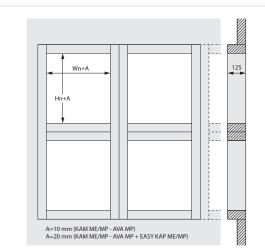

2. In case several shutters are mounted at a minimal distance, the bearing and reinforcement points of the shaft must be adjusted in proportion to the increased weight. The installation of the shaft must comply with the classification report delivered by the shaft manufacturer.

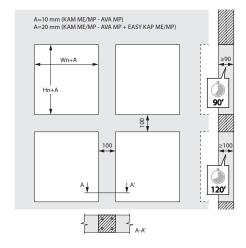

Operation and mechanisms

Operation: general points

- See under 'Installation' (manual opening and closing).
 - A Caution : please note dampers must be fully open before starting supply and/or extract fans.



VA MP MEC Mechanism for remote controlled unlocking and resetting.

Mechanism for the smoke control shutters AVANTAGE MP and KAMOUFLAGE MP. Remote controlled unlocking and resetting.


Opening

- **manual opening**: with the key (delivered in the bag together with the installation guidelines)
- automatic opening: n/a
- **remote opening**: remote by connection of 24 V DC or 48 V DC

Closing

- manual closing: turn the key 20° anti-clockwise. Push the actuating arm in the direction of the arrow and pull the shutter into its closed position. Turn the key 15° clockwise. The key blocks in the lock and the door can be pulled into its lock.
- motorised closing: remote controlled by reversing (2-wire) control or alternating (3-wire) control of the voltage to the motor. After the unlocking or rearmament is complete, the voltage on the motor may be stopped.
 - A Caution: the door can only be closed after it has been fully opened.

Electrical connection

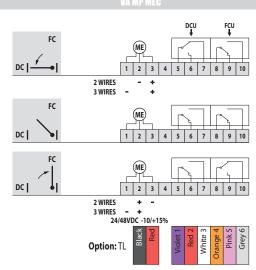

DC: Switch closed position smoke evacuation shutter **FC**: Switch open position smoke evacuation shutter

M	EC	Nominal voltage motor	Nominal voltage magnet	Power consumption (stand-by)	Power consumption (operating)	Standard switches	Protection class
VA	MP MEC	24/48 V DC (-10/+15%)	N/A	N/A	Pnom = 4W	1mA1A 60V	IP 42

24 Weights

Weights

AVANTAGE MP 1V60 - 1V120

Hn\Wn	Immi	950	400	450	500	550	600	650	700
				450	500			650	
385	kg	9,3	9,9	10,4	10,9	11,6	12,1	12,7	13,1
415	kg	9,7	10,4	10,9	11,4	12,1	12,7	13,3	13,7
445	kg	10,0	10,7	11,3	11,8	12,5	13,1	13,7	14,2
475	kg	10,4	11,1	11,7	12,2	13,0	13,6	14,2	14,6
505	kg	10,7	11,5	12,1	12,7	13,4	14,1	14,7	15,2
535	kg	11,1	11,8	12,5	13,0	13,8	14,5	15,2	15,6
565	kg	11,4	12,2	12,9	13,5	14,3	14,9	15,6	16,1
595	kg	11,7	12,5	13,2	13,9	14,7	15,4	16,1	16,6
625	kg	12,1	12,9	13,6	14,3	15,1	15,9	16,6	17,2
655	kg	12,4	13,3	14,0	14,7	15,6	16,3	17,1	17,6
685	kg	12,8	13,6	14,4	15,1	16,0	16,8	17,5	18,1
715	kg	13,7	14,0	14,8	15,5	16,4	17,2	18,0	18,6
745	kg	14,1	14,4	15,2	15,9	16,9	17,7	18,5	19,2
775	kg	14,5	14,7	15,6	16,3	17,3	18,1	19,0	19,6
805	kg	14,8	15,9	16,0	16,7	17,7	18,6	19,5	20,1
835	kg	15,2	16,3	16,3	17,1	18,2	19,0	19,9	20,6
865	kg	15,6	16,7	16,7	17,6	18,6	19,5	20,4	21,2
895	kg	15,9	17,1	17,1	18,0	19,0	20,0	20,9	21,6
925	kg	16,3	17,5	18,6	18,4	19,5	20,4	21,4	22,1
955	kg	16,7	17,9	19,0	18,8	19,9	20,9	21,8	22,6
985	kg	17,1	18,3	19,5	19,2	20,3	21,3	22,3	23,2
1015	kg	17,4	18,7	19,9	21,0	20,8	21,8	22,8	23,6
1045	kg	17,8	19,1	20,3	21,4	21,2	22,2	23,3	24,1
1075	kg	18,2	19,5	20,7	21,9	21,6	22,7	23,8	26,8

Selection data

$\Delta p = 0.6 * v^2 * \zeta$


AVANTAGE MP 1V60 - 1V120

Hn\Wn [mm]	350	400	450	500	550	600	650	700
385 ζ[-]	2,484	2,051	1,747	1,523	1,35	1,213	1,101	1,009
415 ζ[-]	2,235	1,848	1,576	1,375	1,22	1,096	0,996	0,913
445 ζ[-]	2,031	1,682	1,436	1,253	1,113	1,001	0,91	0,834
475 ζ[-]	1,862	1,544	1,319	1,152	1,023	0,921	0,837	0,768
505 ζ[-]	1,719	1,427	1,22	1,066	0,947	0,853	0,776	0,712
535 ζ[-]	1,597	1,326	1,135	0,992	0,882	0,794	0,723	0,663
565 ζ[-]	1,491	1,239	1,061	0,928	0,825	0,743	0,676	0,621
595 ζ[-]	1,399	1,163	0,996	0,872	0,776	0,699	0,636	0,584
625 ζ[-]	1,317	1,096	0,939	0,822	0,732	0,659	0,6	0,551
655 ζ[-]	1,245	1,037	0,889	0,778	0,692	0,624	0,568	0,522
685 ζ[-]	1,181	0,983	0,843	0,739	0,657	0,593	0,54	0,496
715 ζ[-]	1,122	0,935	0,802	0,703	0,626	0,564	0,514	0,472
745 ζ[-]	1,07	0,892	0,765	0,671	0,597	0,539	0,491	0,451
775 ζ[-]	1,022	0,853	0,732	0,641	0,571	0,515	0,469	0,431
805 ζ[-]	0,979	0,817	0,701	0,615	0,547	0,494	0,45	0,413
835 ζ[-]	0,939	0,784	0,673	0,59	0,526	0,474	0,432	0,397
865 ζ[-]	0,902	0,753	0,647	0,567	0,505	0,456	0,415	0,382
895 ζ[-]	0,868	0,725	0,623	0,546	0,487	0,439	0,4	0,368
925 ζ[-]	0,837	0,699	0,601	0,527	0,47	0,424	0,386	0,355
955 ζ[-]	0,808	0,675	0,58	0,509	0,454	0,409	0,373	0,343
985 ζ[-]	0,781	0,653	0,561	0,492	0,439	0,396	0,361	0,332
1015 ζ[-]	0,756	0,632	0,543	0,476	0,425	0,383	0,349	0,321
1045 ζ[-]	0,732	0,612	0,526	0,462	0,412	0,371	0,339	0,311
1075 ζ[-]	0,71	0,593	0,51	0,448	0,399	0,36	0,329	0,302

AVANTAGE MP 1V60 - 1V120 - Free air passage (m²)

Hn\Wn (m	ml	350	400	450	500	550	600	650	700
385 Sn	[m ²]	0,1160	0,1340	0,1520	0,1700	0,1880	0,2060	0,2240	0,2420
415 Sn	[m ²]	0,1260	0,1450	0,1650	0,1840	0,2040	0,2230	0,2430	0,2620
445 Sn	[m ²]	0,1360	0,1570	0,1780	0,1990	0,2200	0,2410	0,2610	0,2820
475 Sn	[m ²]	0,1450	0,1680	0,1900	0,2130	0,2350	0,2580	0,2800	0,3030
505 Sn	[m ²]	0,1550	0,1790	0,2030	0,2270	0,2510	0,2750	0,2990	0,3230
535 Sn	[m ²]	0,1650	0,1900	0,2160	0,2410	0,2670	0,2920	0,3180	0,3430
565 Sn	[m ²]	0,1750	0,2020	0,2290	0,2550	0,2820	0,3090	0,3360	0,3630
595 Sn	[m ²]	0,1840	0,2130	0,2410	0,2700	0,2980	0,3270	0,3550	0,3840
625 Sn	[m ²]	0,1940	0,2240	0,2540	0,2840	0,3140	0,3440	0,3740	0,4040
655 Sn	[m ²]	0,2040	0,2350	0,2670	0,2980	0,3300	0,3610	0,3920	0,4240
685 Sn	[m ²]	0,2140	0,2460	0,2790	0,3120	0,3450	0,3780	0,4110	0,4440
715 Sn	[m ²]	0,2230	0,2580	0,2920	0,3270	0,3610	0,3950	0,4300	0,4640
745 Sn	[m ²]	0,2330	0,2690	0,3050	0,3410	0,3770	0,4130	0,4490	0,4850
115 Sn	[m ²]	0,2430	0,2800	0,3180	0,3550	0,3920	0,4300	0,4670	0,5050
805 Sn	[m ²]	0,2520	0,2910	0,3300	0,3690	0,4080	0,4470	0,4860	0,5250
835 Sn	[m ²]	0,2620	0,3030	0,3430	0,3830	0,4240	0,4640	0,5050	0,5450
865 Sn	[m ²]	0,2720	0,3140	0,3560	0,3980	0,4400	0,4820	0,5240	0,5650
895 Sn	[m ²]	0,2820	0,3250	0,3680	0,4120	0,4550	0,4990	0,5420	0,5860
925 Sn	[m ²]	0,2910	0,3360	0,3810	0,4260	0,4710	0,5160	0,5610	0,6060
955 Sn	[m ²]	0,3010	0,3470	0,3940	0,4400	0,4870	0,5330	0,5800	0,6260
985 Sn	[m ²]	0,3110	0,3590	0,4070	0,4550	0,5030	0,5500	0,5980	0,6460
1015 Sn	[m ²]	0,3200	0,3700	0,4190	0,4690	0,5180	0,5680	0,6170	0,6670
1045 Sn	[m ²]	0,3300	0,3810	0,4320	0,4830	0,5340	0,5850	0,6360	0,6870
1075 Sn	[m ²]	0,3400	0,3920	0,4450	0,4970	0,5500	0,6020	0,6550	0,7070

Sample order

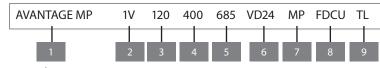

- 1. product
- 2. 1 shutter
- 3. fire resistance of 60 or 120 minutes
- 4. width
- 5. height
- 6. option: type magnet and voltage
- 7. motor: MP
- 8. limit switch 'open/closed'
- 9. option: trailing lead

Approvals and certificates

All our products are submitted to a number of tests by official test institutes. Reports of these tests form the basis for the approvals of the products.

